

GUN LOCK INSTRUCTIONAL GUIDE

AUTOLOADING PISTOL

With the slide locked back and the magazine removed, insert the cable through the ejection port and out the magazine well.

TO LOCK:

With the key turned to farthest clockwise position, insert loose end of cable into padlock. Turn the key counterclockwise and remove key. Check that cable is secure.



REVOLVERS

With the cylinder open, insert the cable through the barrel or through an empty cylinder chamber.

TO LOCK:

With the key turned to farthest clockwise position, insert loose end of cable into padlock. Turn the key counterclockwise and remove key. Check that cable is secure.



BOLT ACTION RIFLES

Open the action (lock open if your firearm has a bolt hold open device) and remove the magazine. Insert the cable through the ejection port and out the magazine well.

TO LOCK:

With the key turned to farthest clockwise position, insert loose end of cable into padlock. Turn the key counterclockwise and remove key. Check that cable is secure. *or*

Remove the bolt from the rifle. Insert the cable through the ejection port and out through the end of the receiver assembly.



GUN LOCK INSTRUCTIONAL GUIDE

AUTOLOADING AND PUMP-ACTION SHOTGUN

With the bolt in the locked open position, insert the cable through the ejection port and out the loading port

TO LOCK:

With the key turned to farthest clockwise position, insert loose end of cable into padlock. Turn the key counterclockwise and remove key. Check that cable is secure.



MODERN SPORTING RIFLE

With the charging handle and bolt locked back and the magazine removed, insert the cable through the ejection port and out the magazine well.

TO LOCK:

With the key turned to farthest clockwise position, insert loose end of cable into padlock. Turn the key counterclockwise and remove key. Check that cable is secure.



SINGLE- ACTION REVOLVERS

After removing the cylinder pin, remove the cylinder from the frame and insert the cable through a chamber in the primary cylinder and then through an additional cylinder (if applicable). Run the remaining cable through the cylinder opening in the revolver frame.

TO LOCK:

With the key turned to farthest clockwise position, insert loose end of cable into padlock. Turn the key counterclockwise and remove key. Check that cable is secure.



GUN VIOLENCE
INTERVENTION TEAM
DATA, POLICY, PARTNERSHIP

